

WIFI NET 2

User Manual

©2025 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

ADJ PRODUCTS LLC World Headquarters

6122 S. Eastern Ave. | Los Angeles, CA 90040 USA

Tel: 800-322-6337 | www.adj.com | lsupport@adj.com

ADJ Supply Europe B.V.

Junostraat 2 | 6468 EW Kerkrade | Netherlands

Tel: +31 45 546 85 00 | Fax: +31 45 546 85 99 | www.adj.eu | service@adj.eu

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online.

Please check www.adj.com for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	Software Version >	DMX Channel Mode	Notes
04/22/24	1.0	1.00	N/A	Initial Release
08/13/24	1.1	N/C	N/A	Updated: Safety Guidelines, Installation, Specifications
10/31/24	1.2	N/C	N/A	Updated: Safety Guidelines, FCC Statement
11/25/24	1.3	1.04	N/A	Updated: Connections, Setup, Specifications; Added: Connecting to Wireless Devices and Connection to Wireless Networks
05/14/25	1.4	N/C	N/A	Updated: Safety Guidelines, Installation, Connecting to Wireless Networks, Specifications

CONTENTS

General Information	4
Limited Warranty (USA Only)	5
Warranty Registration Features	6
Safety Guidelines	7
Overview	9
Installation	10
Connections	12
Remote Device Management (RDM)	13
Setup	14
Connecting to Wireless Devices	18
Connecting to Wireless Networks	19
Maintenance Ordering Information	22
Specifications	23
Dimensional Drawings	24
FCC Statement	25

GENERAL INFORMATION

INTRODUCTION

Please read and understand all instructions in this manual carefully and thoroughly before attempting to operate these products. These instructions contain important safety and use information.

UNPACKING

This device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect the device for damage and be sure all accessories necessary to operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

CUSTOMER SUPPORT

Contact ADJ Service for any product related service and support needs. Also visit forums.adj.com with questions, comments or suggestions.

Parts: To purchase parts online visit:

<http://parts.adj.com> (US)

<http://www.adjparts.eu> (EU)

ADJ SERVICE USA - Monday - Friday 8:00am to 4:30pm PST

Voice: 800-322-6337 | support@adj.com

ADJ SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

Voice: +31 45 546 85 60 | support@adj.eu

ADJ PRODUCTS LLC USA

6122 S. Eastern Ave. Los Angeles, CA. 90040

323-582-2650 | www.adj.com | info@adj.com

ADJ SUPPLY Europe B.V

Junostraat 2 6468 EW Kerkrade, The Netherlands

+31 (0)45 546 85 00 | Fax +31 45 546 85 99

www.adj.eu | info@adj.eu

ADJ PRODUCTS GROUP Mexico

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000

+52 (728) 282-7070

WARNING! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture!

CAUTION! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, as doing so will void your manufacturer's warranty. Damages resulting from modifications to this device and/or the disregard of safety instructions and guidelines in this manual void the manufacturer's warranty claims and are not subject to any warranty claims and/or repairs.

Do not discard the shipping carton in the trash. Please recycle when ever possible.

LIMITED WARRANTY (USA ONLY)

- A. ADJ Products, LLC hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, you must obtain a Return Authorization number (RA#) before sending back the product-please contact ADJ Products, LLC Service Department at 800-322-6337. Send the product only to the ADJ Products, LLC factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall have no liability whatsoever for loss of or damage to any such accessories, or for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product, if the product has been repaired or service by anyone other than ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warrant service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear identifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Products, LLC be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.
- G. This warranty is the only written warranty applicable to ADJ Products, LLC Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

LIMITED WARRANTY PERIODS

- **Non L.E.D. Lighting Products = 1-year (365 days) Limited Warranty** (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LED and lamps)
- **Laser Products = 1 Year (365 Days) Limited Warranty** (excludes laser diodes which have 6 month limited warranty)
- **L.E.D. Products = 2-year (730 days) Limited Warranty** (excluding batteries which have a 180 day limited warranty)
Note: 2 Year Warranty only applies to purchases within the United States.
- **StarTec Series = 1 Year Limited Warranty** (excluding batteries which have a 180 day limited warranty)
- **ADJ DMX Controllers = 2 Year (730 Days) Limited Warranty**

WARRANTY REGISTRATION

This device carries a 2 year limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items, whether under warranty or not, must be freight pre-paid and accompanied by a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain an R.A. number by contacting our customer support team on our customer support number. All packages returned to the service department not displaying an R.A. number on the outside of the package will be returned to the shipper.

FEATURES

- ArtNet / sACN /DMX, 2 Port Node
- 2.4G Wifi
- Line Voltage or PoE powered
- Configurable from unit menu or web browser

INCLUDED ITEMS

- Power Supply (x1)

SAFETY GUIDELINES

To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. ADJ Products, LLC is not responsible for injury and/or damages resulting from the misuse of this device due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this device and only the original rigging parts included with this device should be used for installation. Any modifications to the device and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.



PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED



THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF, AS DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS DEVICE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.



**DO NOT PLUG DEVICE INTO A DIMMER PACK!
NEVER OPEN THIS DEVICE WHILE IN USE!
UNPLUG POWER BEFORE SERVICING DEVICE!
AMBIENT TEMPERATURE RANGE IS -4°F TO 104°F (-20°C TO 40°C). DO NOT OPERATE WHEN AMBIENT TEMPERATURE FALLS OUTSIDE OF THIS RANGE!
KEEP FLAMMABLE MATERIALS AWAY FROM DEVICE!**



IF THE DEVICE IS EXPOSED TO ENVIRONMENTAL TEMPERATURE CHANGES SUCH AS RELOCATION FROM AN OUTDOOR COLD TO AN INDOOR WARM ENVIRONMENT, DO NOT POWER THE DEVICE ON IMMEDIATELY. INTERNAL CONDENSATION AS A RESULT OF ENVIRONMENTAL TEMPERATURE CHANGE CAN CAUSE INTERNAL DAMAGE. LEAVE THE DEVICE POWERED OFF UNTIL IT HAS REACHED ROOM TEMPERATURE BEFORE POWERING ON.




THIS EQUIPMENT COMPLIES WITH FCC RADIATION EXPOSURE LIMITS SET FORTH FOR AN UNCONTROLLED ENVIRONMENT. THIS EQUIPMENT SHOULD BE INSTALLED AND OPERATED WITH A MINIMUM DISTANCE OF 20CM BETWEEN THE RADIATING DEVICE AND ANY OPERATOR OR OTHER PERSON. THIS TRANSMITTER MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER.

SAFETY GUIDELINES

- For your own personal safety, please read and understand this manual in its entirety before attempting to install or operate this device.
- Save the packing carton for use in the unlikely event the device may have to be returned for service.
- Do not spill water or other liquids into or on to the device.
- Be sure that the local power outlet matches the required voltage for the device
- Do not remove the outer casing of the device for any reason. There are no user serviceable parts inside.
- Disconnect the device's main power when left unused for long periods of time.
- Never connect this device to a dimmer pack
- Do not attempt to operate this device if it has been damaged in any way.
- Never operate this device with the cover removed.
- To reduce the risk of electrical shock or fire, do not expose this device to rain or moisture.
- Do not attempt to operate this device if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Never block the ventilation holes. Always be sure to mount this device in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- This unit is intended for indoor use only. Use of this product outdoors voids all warranties.
- Always mount this unit in a safe and stable matter.
- Please route your power cord out of the way of foot traffic. Power cords should be routed so they are not likely to be walked on, or pinched by items placed upon or against them.
- Ambient operating temperature range is **-4°F to 104°F (-20°C to 40°C)**. Do not operate this device when ambient temperature falls outside this range!
- Keep flammable materials away from this fixture!
- The device should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen on, or liquid has been spilled into, the device.
 - C. The device has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

OVERVIEW

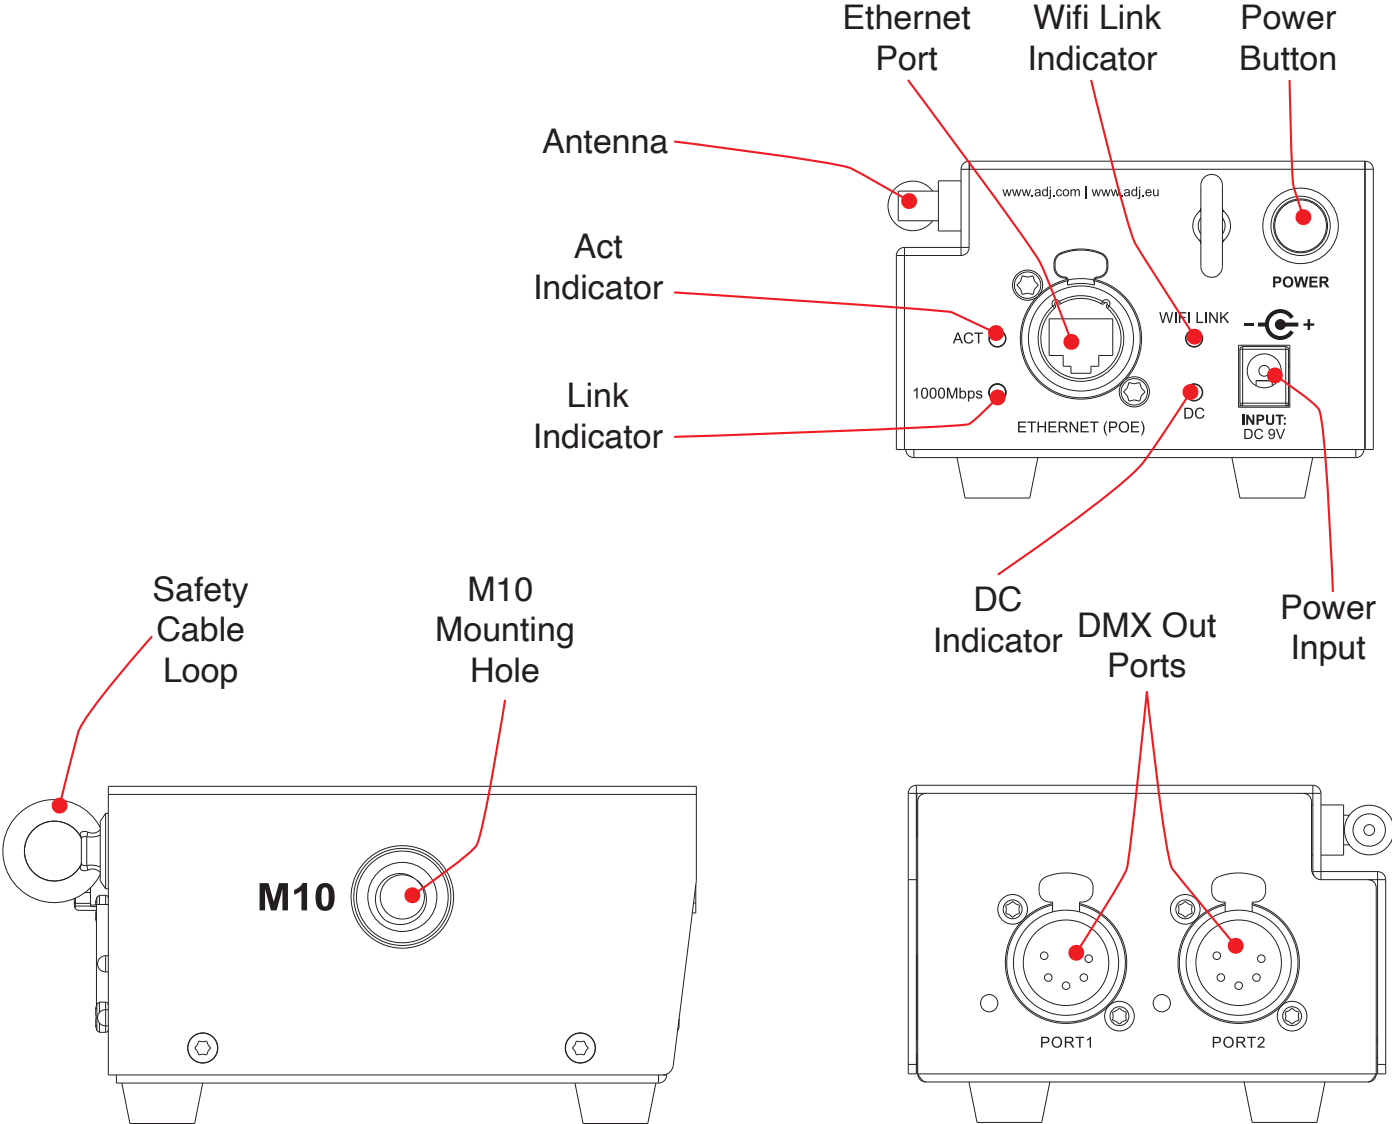

INSTALLATION



FLAMMABLE MATERIAL WARNING

Keep device at least 8in. (0.2m) away from any flammable materials, decorations, pyrotechnics, etc.



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



MINIMUM DISTANCE TO OBJECTS/SURFACES MUST BE 40 FEET (12 METERS)

DO NOT INSTALL THE DEVICE IF YOU ARE NOT QUALIFIED TO DO SO!

Ambient operating temperature range is **-4°F to 104°F (-20°C to 40°C)**. Do not use this device when ambient temperature falls outside this range!

Device should be installed away from walking paths, seating areas, or areas where unauthorized personnel might reach the device by hand.

Device **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting a single device or multiple devices to any metal truss/structure or placing the device(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the device(s), clamps, cables, and accessories.

NEVER stand directly below the device(s) when rigging, removing, or servicing.

Overhead installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable.


Allow approximately 15 minutes for the fixture to cool down before servicing.

For best signal quality, position the antenna at a 45-degree angle.

INSTALLATION

CLAMP INSTALLATION


This device features an M10 bolt hole built into the side of the device, as well as a safety cable loop located on the rear face of the fixture beside the power button (see the illustration below). When mounting the fixture to a truss or any other suspended or overhead installation, use the mounting hole to insert and install a mounting clamp. Attach a separate SAFETY CABLE of the appropriate rating (not included) to the provided safety cable loop.

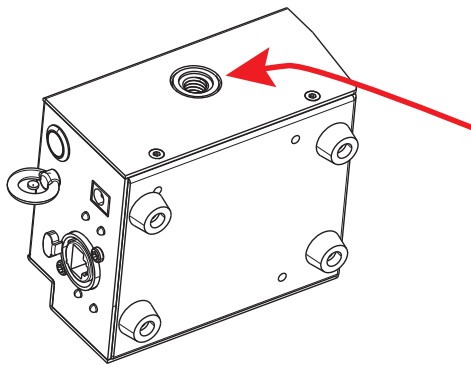

**M10 BOLT HOLE
FOR INSTALLATION
OF MOUNTING
CLAMP**



**ALWAYS ATTACH A SAFETY
CABLE WHENEVER INSTALLING
THIS FIXTURE IN A SUSPENDED
ENVIRONMENT TO ENSURE THAT
THE FIXTURE WILL NOT FALL IF
THE CLAMP FAILS.**

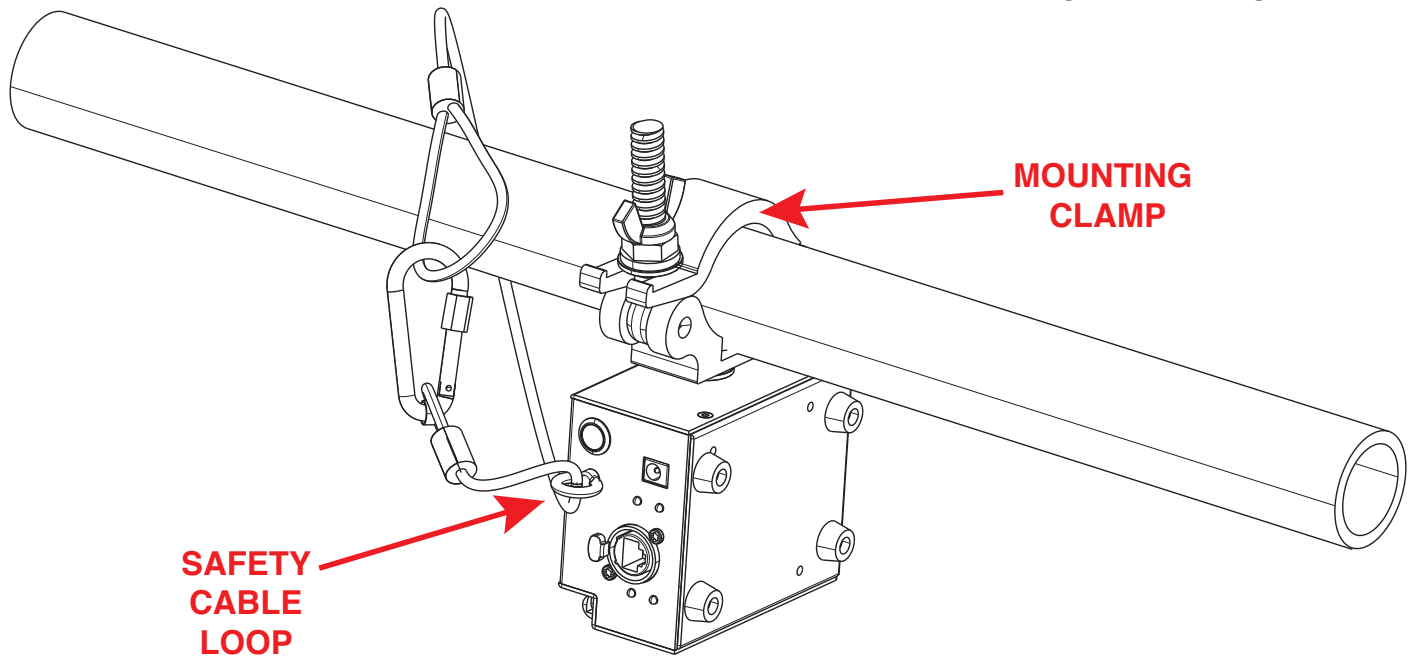

**MOUNTING
CLAMP**

**SAFETY
CABLE
LOOP**


RIGGING

Overhead rigging requires extensive experience, including but not limited to: calculating working load limits, understanding the installation material being used, and periodic safety inspection of all installation material and the fixture itself. If you lack these qualifications, do not attempt to perform the installation yourself. Improper installation can result in bodily injury.


CONNECTIONS

This device can receive input from either a wired controller via the Ethernet port, or from a wireless controller such as a tablet for computer via WiFi. Output signals from the device are sent via the DMX ports to the lighting fixtures. Refer to the diagrams below.

WIRED CONTROL VIA ETHERNET

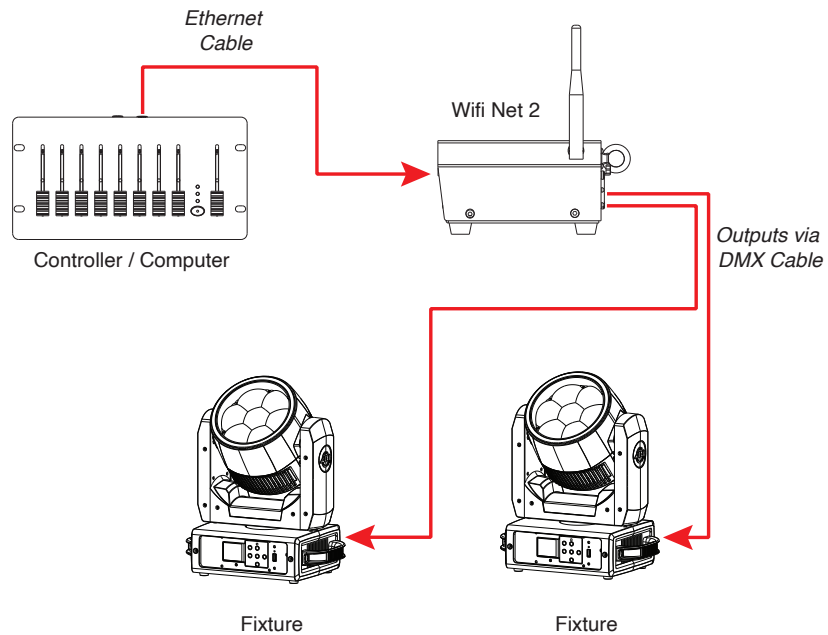

WIRELESS CONTROL VIA WIFI

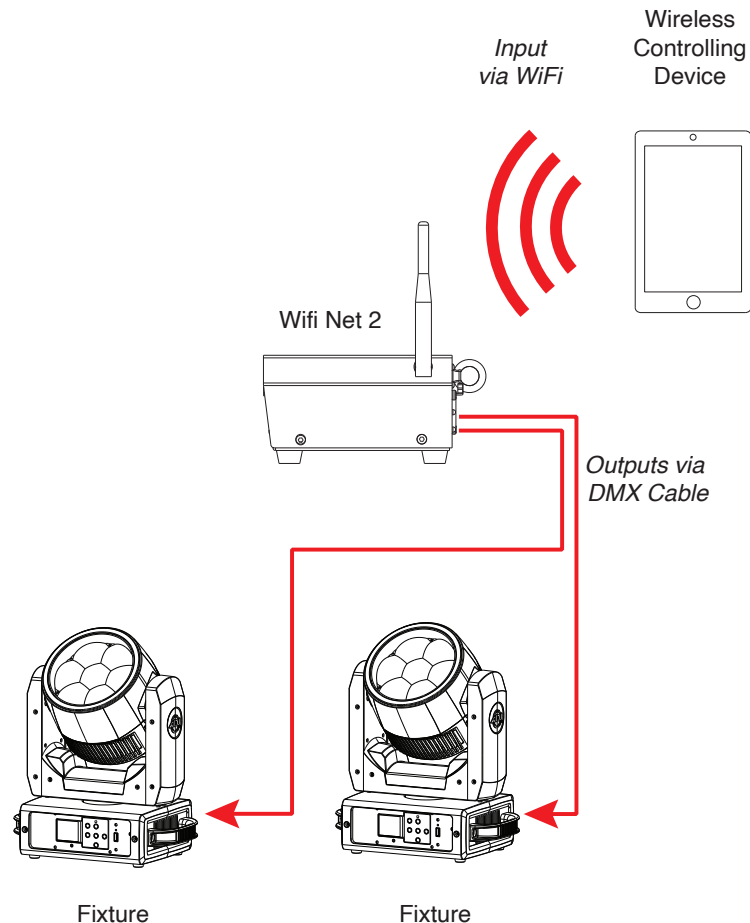

REMOTE DEVICE MANAGEMENT (RDM)

NOTE: In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, and allows the DMX systems of the fixtures to be modified and monitored remotely. This protocol is ideal for instances in which a unit is installed in a location that is not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then use its SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

FIXTURE RDM INFORMATION:


Device ID	Device Model ID	RDM Code	Personality ID
N/A	N/A	0x1900	N/A

Please be aware that **not all RDM devices support all RDM features**, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.

SETUP


Follow the directions below to set up your device.

1. Use the included power supply to connect the unit to power, then press the power button to switch the unit on.
2. Use an Ethernet cable to connect the unit's Ethernet port to your computer.
3. Open the Network Preferences window on your computer, and navigate to the "Ethernet" section. Refer to the image below.
 - Set the Configure IPxx setting to "Manual" or the equivalent.
 - Enter in an IP Address that matches the address listed on the bottom of your device, except for the last 3 digits. For Example, if the address on the bottom of your device is "2.63.130.001", you should set the IP Address in the Ethernet tab of your computer's Network Preferences to "2.63.130.xxx", where xxx is any 3-digit combination other than 001.
 - Set the Subnet Mask to "255.0.0.0".
 - Clear the box for Router.

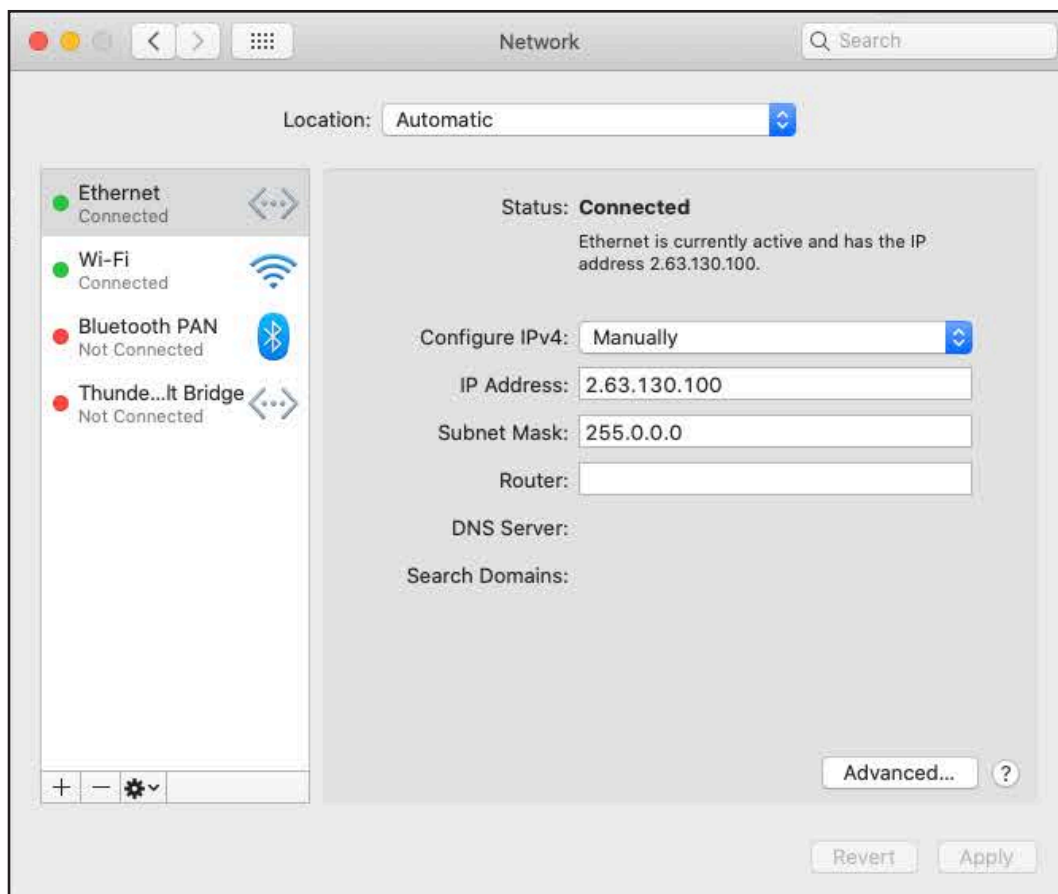

SETUP

4. Go to your browser window. Enter in the exact IP address (for all numbers this time) shown on the bottom of your device. This should take you to a login screen, where you can use the password “ADJadmin” to access the device, then press Login.

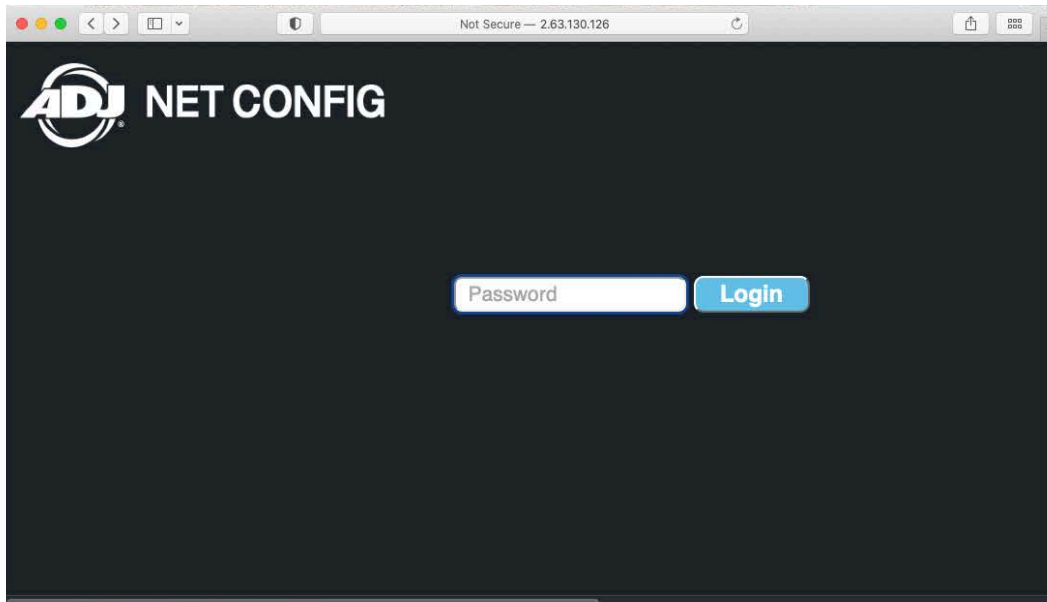

5. The browser will now load the Information page. Here you can view the device name, an editable device label, the firmware version, IP address, subnet mask, and Mac address. Reaching this page means that initial setup is complete.



SETUP

Now that initial setup has been complete, you can jump to various pages in your web browser to configure various operational settings and functions.

DMX PORT

Use this page to select the operating protocol for this device, and set activation status, network, and universe for each of the 2 DMX ports.

The screenshot shows the 'DMX Port' configuration page in the ADJ NET CONFIG web interface. The browser address bar shows 'Not Secure — 2.63.130.126'. The left sidebar contains links for Information, DMX Port (selected), Settings, Update, and Password. The main content area has a 'Protocol' dropdown set to 'ArtNe'. Below this is a table for configuring two DMX ports:

	Mode	Net	Universe
Port 1	Off	0	0
Port 2	Off	0	1

A 'Save' button is located at the bottom of the configuration area.

SETTINGS

Use this page to set the following operational settings:

- **DMX Rate**
- **RDM Status:** enable or disable RDM
- **Signal Loss:** defines how the device will behave when DMX signal is lost or interrupted
- **Merge Mode:** in the event of two input signals, the node will give precedence to either the latest received signal (LTP) or the signal with the higher value (HTP)
- **Label:** give the device a custom nickname; please note that the name entered here will also be your wireless network (SSID)

The screenshot shows the 'Settings' page in the ADJ NET CONFIG web interface. The browser address bar shows 'Not Secure — 2.63.130.126'. The left sidebar contains links for Information, DMX Port, Settings (selected), Update, and Password. The main content area displays the following settings:


DMX Rate	20Hz
RDM	Disable
Signal Loss	Hold DMX
Merge Mode	HTP
Label	WIFI_NET2_1

A 'Save' button is located below the settings. At the bottom of the page is a 'Factory Reset' button.

SETUP


UPDATE

Use this page to update the software on this device. Simply click the “Choose File” button to select the update file, then click “Start Update” to commence the update process.

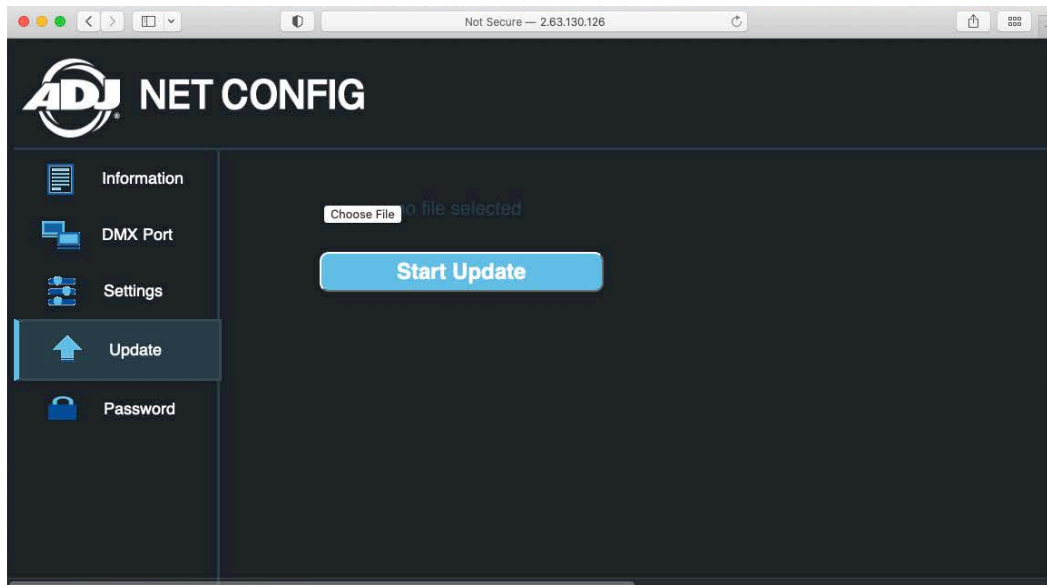

PASSWORD

Use this page to update the device password (default password: ADJadmin). Enter the current password in the “Old Password” field, then input a new password (between 8 and 15 characters long) in the “New Password” field, and re-enter it in the “Confirm” field. Click “Save” to apply the changes. The newly saved password will become your login credential for both the web browser and the WiFi network of your WIFI NET2 device. Be sure to write it down for future reference.

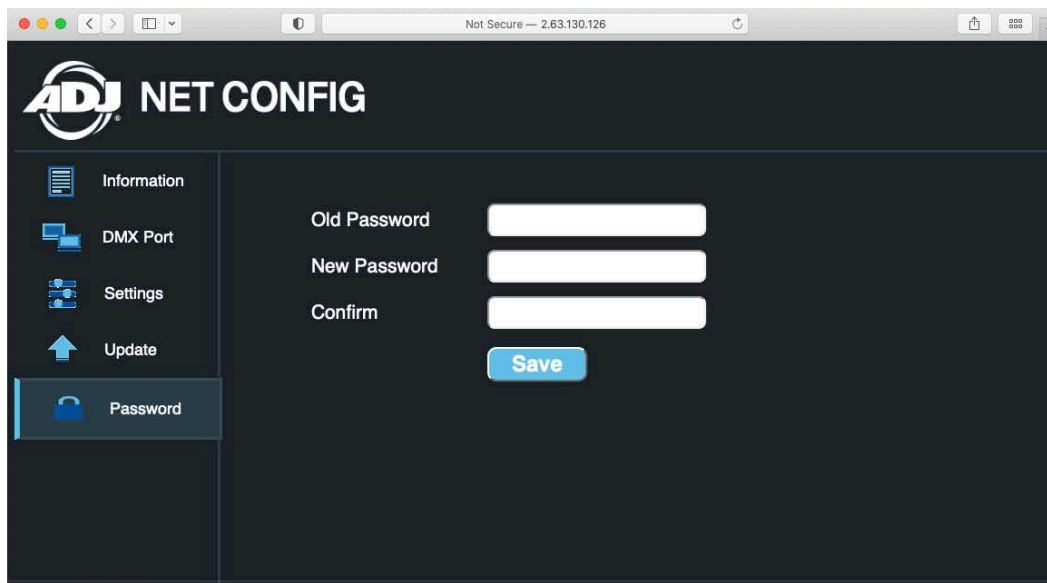

CONNECTING TO WIRELESS DEVICES

1. Open Wi-Fi Settings

For iOS (iPhone or iPad):

- Open the Settings app.
- Tap on Wi-Fi.

For Android:

- Swipe down from the top of the screen and tap the Wi-Fi icon, or open the Settings app and tap on Network & Internet (or simply Wi-Fi).

2. Turn On Wi-Fi not already enabled.

- Toggle the Wi-Fi switch to turn it on (it should light up or turn blue on most devices).

3. Select your network

- A list of available networks will appear. Look for your Wi-Fi network's name (SSID). The default SSID for this device is "WIFI NET2"- if this was changed, you would no longer see this and you'd only see your new network name in the network list.
- Tap on the name of your Wi-Fi network.

4. Enter the Wi-Fi Password

- If the network is secured, a password prompt will appear, if not, tap Connect.
- Carefully enter the Wi-Fi password and tap Connect or Join.

5. Verify Connection

- Once connected, the network name should have a checkmark (on iOS) or say Connected (on Android) next to it.
- You may see the Wi-Fi icon appear at the top of the screen, indicating a successful connection.

6. Test the Connection

- Open a browser or app to ensure that you're connected to the device.

7. Troubleshooting (if needed)


- **Incorrect Password:** Double-check and re-enter it if you receive a password error.
- **Network Not Listed:** Ensure you're within range and that the network is broadcasting.
- **Reboot Device:** If issues persist, restarting the device or "Forgetting" the network in Wi-Fi settings and reconnecting may help

CONNECTING TO WIRELESS NETWORK

1. Connect your computer to the WiFi Net 2 device via WiFi. The name of the unit should appear on your computer as “WIFI_NET2_1”.
2. Open your web browser and type in the following IP address: **10.10.100.254**. This is the default address for all WiFi Net 2 devices.
3. When prompted for log-in credentials, enter “admin” for both the user name and password.
4. The language of the configuration page is set to Chinese by default. To change to English, click on the text that reads “English” in the upper right corner.



5. Click on the WiFi Settings tab on the left side of the screen (1). In the menu for WiFi Work Mode, select “AP+STA mode” from the drop down menu (2), then press the “Search” button located under the “STA Mode” header (3).

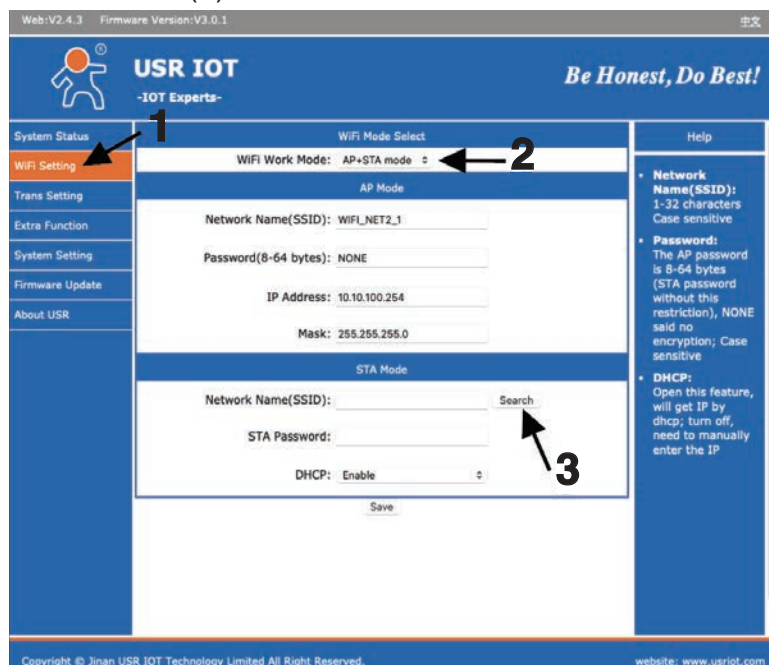

CONNECTING TO WIRELESS NETWORK

6. Select the WiFi network (SSID) that you want to use from the list that appears, then click the “OK” button.
7. The unit should return to the WiFi Settings page. Under the “STA Mode” header, the name of the selected WiFi network should be shown in the box for “Network Name (SSID)”. Now enter the password for the WiFi network in the “STA Password” box (1), and click the “Save” button (2).

Web: V2.4.3 Firmware Version: V3.0.1

USR IOT -IoT Experts- Be Honest, Do Best!

System Status

WiFi Setting

Trans Setting

Extra Function

System Setting

Firmware Update

About USR

WiFi Mode Select

WiFi Work Mode: AP+STA mode

AP Mode

Network Name(SSID): WIFL_NET2_1

Password(8-64 bytes): NONE

IP Address: 10.10.100.254

Mask: 255.255.255.0

STA Mode

Network Name(SSID): ADJ-GUEST Search

STA Password: 1

DHCP: Enable

Save 2

Help

- **Network Name(SSID):** 1-32 characters Case sensitive
- **Password:** The AP password is 8-64 bytes (STA password without this restriction), NONE said no encryption; Case sensitive
- **DHCP:** Open this feature, will get IP by dhcp; turn off, need to manually enter the IP

Copyright © Jinan USR IOT Technology Limited All Right Reserved. website: www.usriot.com

8. The unit will display a “Save Success” message. Press the “Restart” button and allow the device to reboot.
9. Once the device has rebooted, click the “System Status” tab on the left side of the screen (1), and note the STA IP address. This address will be needed for the control app.

Web: V2.4.3 Firmware Version: V3.0.1

USR IOT -IoT Experts- Be Honest, Do Best!

System Status

WiFi Setting

Trans Setting

Extra Function

System Setting

Firmware Update

About USR

Parameter

Module MAC: D4AD206683B8

Module Mid: USR-C210

Module Ver: 3.0.1

WiFi Mode: apsta

AP IP: 10.10.100.254

AP SSID: WIFL_NET2_1

AP Secure: NONE

STA SSID: ADJ-GUEST

STA IP: 192.168.1.108 2

STA Gateway: 192.168.1.1


Help

- **Module Ver:** The current firmware version
- **WiFi Mode:** The WiFi mode of module contains AP/Station/AP+STA


Copyright © Jinan USR IOT Technology Limited All Right Reserved. website: www.usriot.com

CONNECTING TO WIRELESS NETWORK

10. Connect your controlling device (an iPad or other tablet, for example) to the same WiFi network that the WiFi Net 2 is connected to.
11. Configure the control app. Open the app's universe settings and select an output port to control.

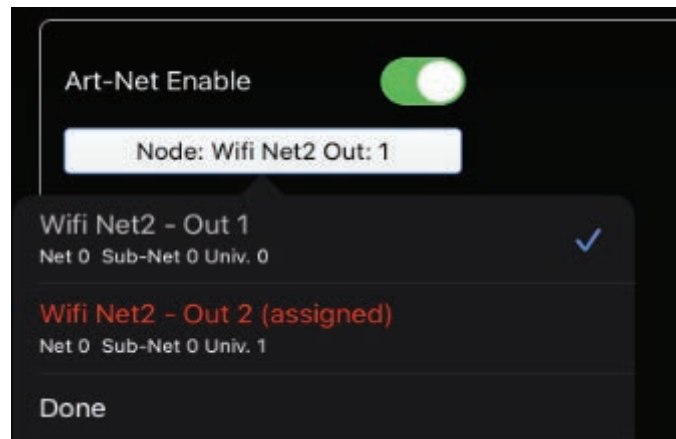

12. In the box for IP, select the option for “Static” (1), then enter the STA IP address from Step 9 into the box for IP Address (2).

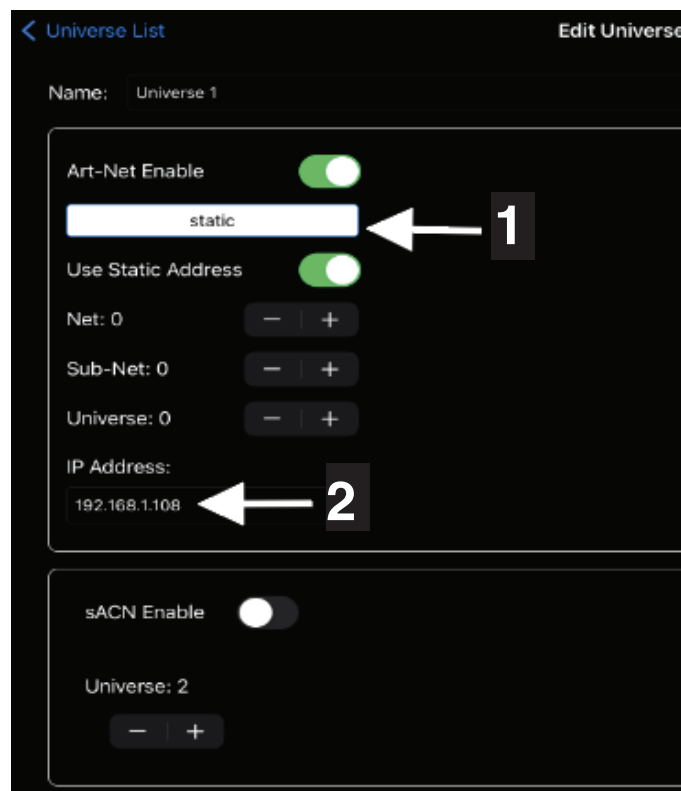

13. The setup is complete. You should now have the ability to control the WiFi Net 2 from your wireless device.

MAINTENANCE



DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!

CLEANING

Regular cleaning is recommended to ensure proper function and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky, or particularly dirty environments can cause greater accumulation of dirt on the device. Clean the external surface regularly with a soft cloth to avoid dirt/debris accumulation.

NEVER use alcohol, solvents, or ammonia-based cleaners.

MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this device. Please refer all other service issues to an authorized ADJ service technician. Should you need any spare parts, please order genuine parts from your local ADJ dealer.

Please refer to the following points during routine inspections:

- A. A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- B. Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- C. Check for any deformations on the housing, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the device. Damaged rigging points or unsecured rigging could cause the device to fall and seriously injure a person(s).
- D. Electric power supply cables must not show any damage, material fatigue, or sediments.

ORDERING INFORMATION

SKU (US)	SKU (EU)	ITEM
WIF200	1321000088	ADJ Wifi Net 2

SPECIFICATIONS

Features:

- ArtNet / sACN /DMX, 2 Port Node
- 2.4G Wifi
- Line Voltage or PoE powered
- DHCP or Statis IP Address
- Configurable from web browser

Protocols:

- DMX512
- RDM
- Artnet
- sACN

Physical:

- M10 Thread for clamp / rigging
- Safety eyelet
- 1x Indoor RJ45 Input
- 2x 5-pin XLR Outputs

Dimensions & Weight:

- Length: 3.48" (88.50mm)
- Width: 5.06" (128.55mm)
- Height: 2.46" (62.5mm)
- Weight: 1.23lbs. (0.56kg)

Power:

- 9VDC and POE
- POE 802.3af
- Power: DC9V-12V 300mA min.
- POE Power: 15W
- Power Consumption: 2W @ 120V and 2W @ 230V

Thermal:

- Ambient Operational Temperature: -4°F to 104°F (-20°C to 40°C)
- Humidity: <75%
- Storage Temperature: 77°F (25°C)



Certifications & IP Rating:

- CE
- FCC
- IP20



Specifications subject to change without any prior written notice.

DIMENSIONAL DRAWINGS

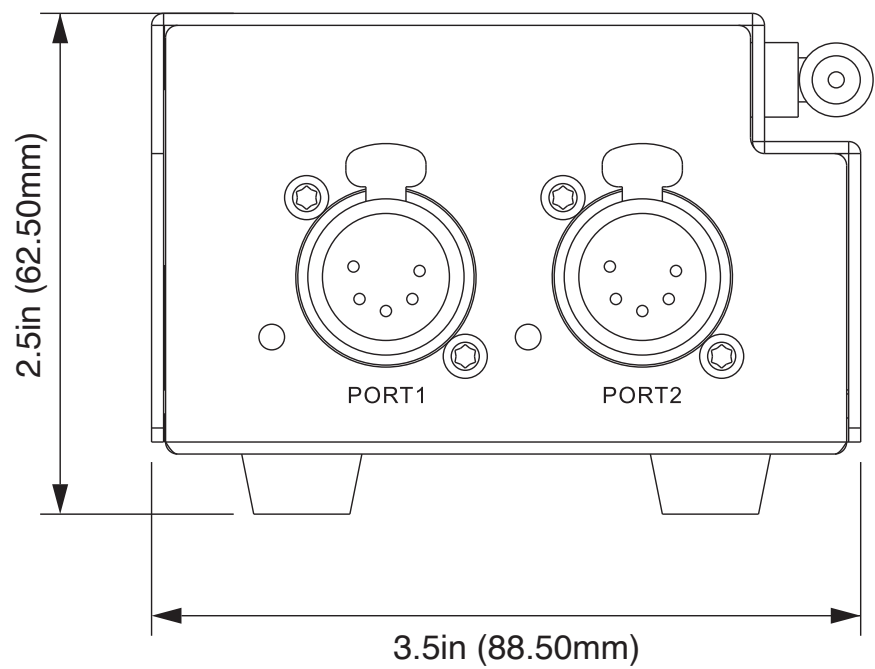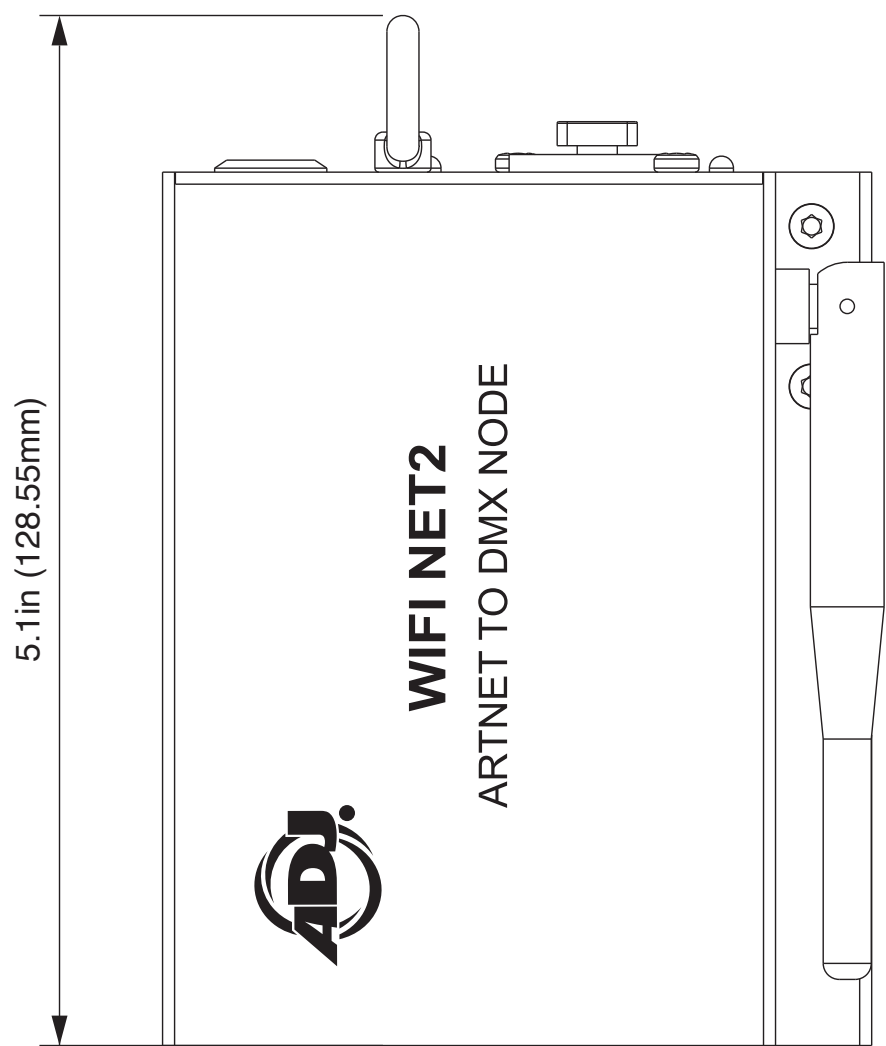

FCC STATEMENT

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



